

KINDLE PAPERWHITE QUICK GUIDE


INTRODUCTION

The Louis Bay 2nd Kindle Paperwhites that are available for loan come in a kit containing the following elements:

- 1 Kindle Paperwhite device
- 1 USB power cord
- 1 USB wall power (AC) adaptor
- 1 case
- 1 carrying case

Please keep all of these components together, as you will be responsible for returning all of these pieces together when you return your kindle at the end of the lending period.

Please charge the Kindle before returning it to the library. To charge your Kindle, connect it to the USB cable, then connect the opposite end of the USB cable to a computer, or power adaptor.

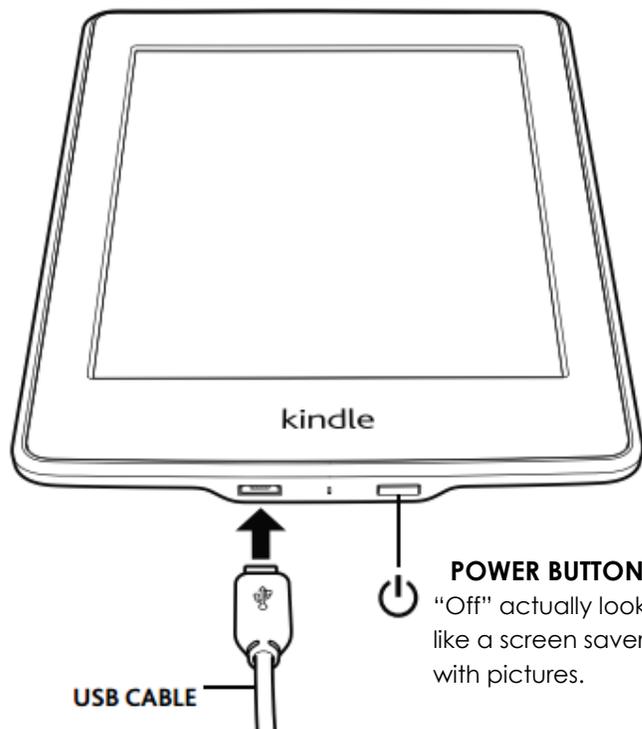

READING A BOOK

To read on one of the library's Kindles, turn on the Kindle Device, navigate to the main menu and tap a book from the booklist. Tap the right side of the page to advance to a new page of the book or main menu. Tap the left side of the screen to turn back a page.


KINDLE MENUS

When you turn on the Kindle you will see a **menu** across the top (see right).

If you do not see the menu, and instead see a **page of text**, it means you are not on the home screen. Tap the very top edge of the screen to make the menu appear.

You will not be able to use social media options or add your own content on our Kindles (notice your shopping cart icon is grayed out) but we keep our Kindles stocked with the most recent titles.

If you have a request for a title to add to the Kindles, please make your request by phone or in person at the **Reference Desk: 973-427-5745**.

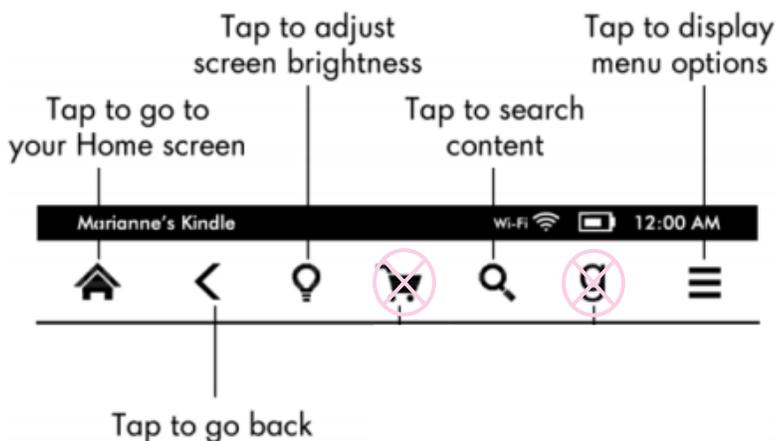


MENUS CONT'D

When you are reading a book, an additional menu appears below the main bar of icons.

These menus allow you to:

- Customize text display
 - Make the font larger or smaller
 - Change the font style
 - Change the space between lines of text
 - Adjust the margins around the text
- Navigate the book
 - Navigate to different chapters or pages
 - View notes or highlights you have made
- X-Ray allows you to view comments made by other readers
- Bookmarks allow you to mark a location in the text to return to at a later time

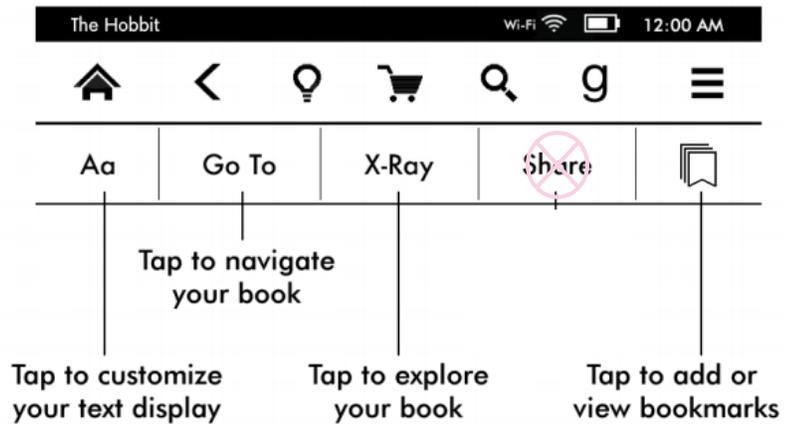

In addition to the buttons labeled in the diagram to the right, you will notice a **black bar at the top** of the screen containing any or all of the following icons:



This symbol indicates whether you are **connected to the internet** via a Wi-Fi signal. You must be connected to the internet update the Kindle's library. However, remaining connected to a Wi-Fi can drain the Kindle's battery more quickly.



The picture of a battery indicates **how much charge you have left** on the device. When the Kindle is plugged in and charging, a lightning bolt icon will appear inside the battery image.



If you see the airplane in your top bar it indicates that **airplane mode** is on. You will not be able to connect to Wi-Fi until you turn off airplane mode.



If you see this segmented circle spinning it means the Kindle is working on something – it may be automatically bringing a new book to your Kindle, or it might be opening a particularly large book.



The padlock means that certain security controls are in place on the Kindle, such as deactivating the Kindle Store. If you do not see this padlock icon, kindly alert a library staff member.

KINDLE SAFETY

Do not get this Kindle wet, use it near bodies of water, or leave the Kindle out in direct sunlight. Keep it in its protective case at all times and do not return the Kindle in the library's book drop. The Kindle must be returned in person to the Louis Bay 2nd Library.

REFERENCES

This guide was adapted for the Louis Bay 2nd Library from *The Kindle User Guide, 2nd Edition* published in 2014 by Amazon, Inc. The original guide can be accessed at the following link: <http://bit.ly/1ec2WF4>

All images of and references to Kindle are the intellectual property of Amazon, Inc. or its affiliates.